

BAROQUE RECORDERS

Alto after Stanesby Junior 415 Hz	1259.00
Alto after Rottenburgh 410 or 415 Hz	1259.00
Alto after Hotteterre 440 Hz	1259.00
Alto after Bizet 392 Hz	1259.00
Alto in g after Hotteterre 392 Hz	1259.00
Soprano after Wijn 415 Hz	1045.00
Voice Flute after Denner 415 Hz	1357.00
Tenor after Stanesby Junior 415 Hz	1647.00
Tenor after Stanesby Junior 440 Hz	1647.00
Modern Tenor 440 Hz with double bell key	2054.00
Modern Bass 440 Hz (2 old style keys)	2016.00

PRE-BAROQUE RECORDERS

Soprano in c after Haka	924.00
Pre-baroque alto in g after Haka	1092.00
Tenor after an Italian instrument	1375.00

MEDIEVAL RECORDERS

Sopranino	737.00
Soprano	857.00
Alto in g	962.00
Alto in f	1071.00
Tenor in d	1298.00
Tenor in c	1375.00
Double soprano recorder	1540.00

GANASSI RECORDERS

Descant in d	823.00
Soprano in c	857.00
Alto in g at 466, 460, 440 Hz	962.00
Alto in g 415 Hz or in f 440 Hz	1071.00
Tenor in d (pearwood or palissander)	1298.00
Tenor in c (pearwood or palissander)	1466.00

ELECTROACOUSTIC RECORDERS

Alto in f 440 Hz	1522.00
Tenor in c 440 Hz	1892.00
Bass 440 Hz	2336.00

WHISTLES

Whistle in d	185.00
Low whistle in d	555.00

Extra joints (for medieval & Ganassi recorders)

Descant in d	158.00
soprano in c	169.00
alto in g 466, 460 or 440 Hz	198.00
alto in g 415 or f 440 Hz	218.00
tenor in d	271.00
tenor in c	355.00

CD-ROM on the recorder	10.00
-------------------------------	--------------

Prices last modified on 01/07/11

Page updated on 20/07/2010